

INFERNO GEN 2: MAINTENANCE GUIDE



**WOLVERINE
AIRSOFT**



Begin by disassembling your Inferno unit by unscrewing the two halves counterclockwise.



Next, disassemble the cylinder assembly by pushing the nozzle towards the back of the cylinder.



Pay close attention to the 1mm x 11mm oring around the poppet and do not lose it. You will need it for reassembly.



Next slide the baffle off of the nozzle/poppet assembly and pull out the spring.

Here are all the loose parts after you have completely disassembled the unit.





Lubricate* the 1.5mm x 16mm oring located below the threads and the 1mm x 13mm oring located above the threads.



*Wolverine Airsoft suggests TechT GunSav for oring lubrication.



Lubricate the 1mm x 13mm oring around the poppet base.

Note: the nozzle and poppet assembly does not come apart.



Finally, if for some reason the two piece baffle comes apart you can simply slide the two halves back together. Make sure that the 1mm x 13mm oring is still in place on the lower half of the baffle when you do so.



Your Inferno is ready to reassemble. Begin by sliding the poppet and nozzle assembly into the baffle. Then install the 1mm x 11mm oring around the nozzle.




Then slide the baffle and nozzle back into the cylinder.



The spring goes
in this hole.

1

Next, place the spring in the back of the nozzle as indicated.

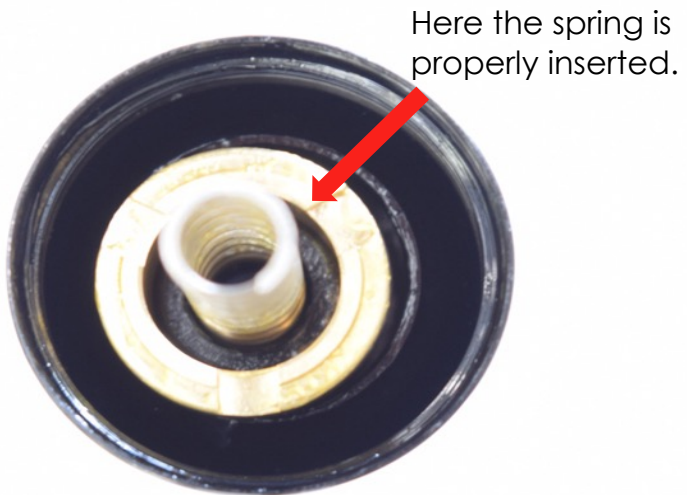

Here the spring is
properly inserted.

2



The cylinder is ready to
be screwed back onto
the valve body.

3



Next, align the spring with the cup on the valve body.



Finally, push the valve body into the cylinder and screw the two halves of the unit back together clockwise.

Your Inferno is now ready install back into your gearbox and gun.



Thank you for purchasing from Wolverine Airsoft!

For more information:

- Visit www.wolverineairsoft.com
- Follow us on any social media outlet
- Contact us:
 - Email: tech@wolverineairsoft.com
 - Phone: (423) 398 - 5985